



- Notes:
1. 8' Power Cord w/ wall plug connector provided.
 2. Local Audible /Strobe factory wired. Remote Audible and Visual Alarms must be 120VAC and connected to terminal in Relay Junction Box.
 3. Sensor Cable is 3 conductor 18. w/ foil shield.
 4. Analog Outputs are adjustable 0 - 5VDC or 0 - 10VDC.